



Lamp Information		
Cat No	Lamp Type	Max Watts
1095	PAR38 Incandescent or HID	175

HCC@GF9E I F98: CF
BG5@5HCB.

- Wire strippers
- Phillips head screwdriver
- Silicone grease
- Thread sealant



K 5FB-B; . Luminaire must be installed and grounded in accordance with the National Electrical Code (NEC) and local codes. For portable stake or surface mount using a cord and plug, the luminaire must be plugged into a receptacle protected by a ground fault circuit interrupter (GFI). Failure to do so may result in serious injury and/or damage to the luminaire.

A 5-BHB5B79. To assure proper operation and efficiency and to prevent luminaire overheating, lens must be kept clean and free of dirt, dust, leaves, trash and mineral deposits from water. A regular schedule maintenance program is recommended.

G5: 9MK 5FB-B; . Luminaire can become very hot depending on the lamp wattage used. Lens and housing around the lamp can become hot enough to blister hands. Particular care should be taken not to locate luminaires where small children can reach them if high wattage lamps are used.

BCI9. Always use UL recognized wire connectors for connections.

BCI9. Save these instructions for future reference.

-B'; FCI B8 @ A -B5-F9-GI @GFB: CF 56CJ 9; F589-BG5@5HCB'CB@M

@ A -B5-F9A CI BHB; .

1. Make sure electrical supply is off at circuit breaker before starting luminaire installation or servicing luminaire.
2. Thread luminaire onto junction box or other mounting device until it is at desired direction using thread sealant. Tighten jam nut (provided) to ensure the luminaire is locked to adjusted position.
3. Attach luminaire leads to line in leads observing polarity, black to black, white to white and green to ground using silicone filled safety connectors (provided).
4. Attach junction box cover with luminaire to junction box (by others). Make sure not to pinch wires that may be sandwiched between cover and box.
5. Coat exposed luminaire threads with thread sealant to keep moisture from entering junction box or other mounting device.
6. To adjust luminaire aiming angle, untighten adjustable knuckle screw. Do not disengage totally. Hold luminaire at selected angle and tighten knuckle screw firmly.
7. Install lamp.
8. Coat all exposed screws with silicone grease.
9. Supply power to the luminaire and check for proper operation.

**ADCFH5BHG5: 9MBGFI 7HCBG
H9@: <H8 @AD'G<CH'**

**K 5FB-B; .HC F9BI 79H9F-G? C: : F9CF-B> FMHC
D9FCBG**

1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamps get hot quickly! Contact only switch/plug when turning on.
3. Do not touch hot lens, guard or enclosure.
4. Keep lamp away from material that may burn.
5. Do not touch the lamp at any time. Use a soft cloth. Oil from the skin may damage lamp.
6. Do not operate luminaire fitting with a missing or damaged cover.

@AD'BG5@5HCB#F9D@79A 9BH

75I HCB. Do not exceed maximum wattage marked on luminaire label.

1. To prevent electrical shock, disconnect transformer from electrical supply before service.
2. Loosen screws from shroud.
3. Remove shroud and o-ring to expose lamp.
4. Replace lamp with correct wattage and type marked on fixture label.

BCH. DO NOT touch lamp with bare hands. Always use soft cloth or the plastic wrapping (if available) from lamp to handle the lamp.

5. Re-install shroud and o-ring and tighten shroud screws.